 


DAYSNEW

2.4G/Bluetooth Dual-mode Wireless TV Headphone

DB100

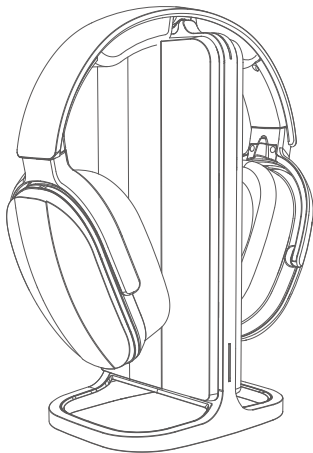

 
User Manual

Please scan QR code
and watch video guide

In the Box

Headphones

①

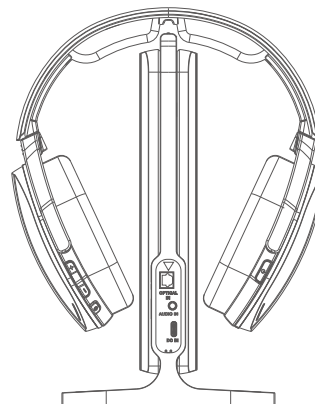

②

Charging Dock
(Also serve as a transmitter)



 
③

Type-C interface AC/DC




④

RCA-Female 3.5mm cable



⑤

 3.5mm Audio Cable



⑥

Optical TOSLINK Audio Cable

 


⑦

User Manual


Product Overview

Overview of the Charging Dock/Transmitter

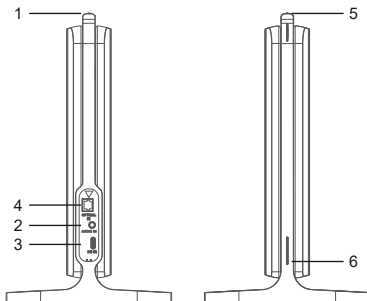

1. Headphones charging PIN contact
2. Φ 3.5mm audio interface (AUDIO IN)
3. Type-C interface
4. Optical TOSLINK audio interface (AUDIO IN)
5. SIGNAL communication signal indicator light
6. CHARGE power signal indicator

 Overview of the Headphones

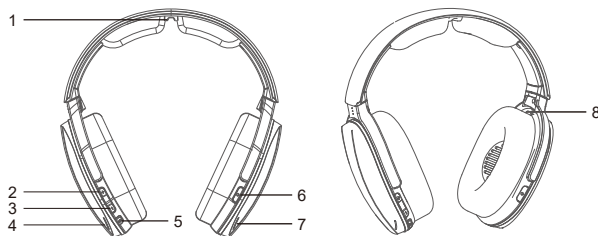

1. Charging PIN contact
2. Volume up button
3. Volume down button
4. SIGNAL indicator
5. Bluetooth/2.4G switch button
6. Power button
7. Power indicator light
8. Headphones cover on/off button (R side)


QuickGuide of LED Indicators

Headphone	Power on	The power indicator on the right ear cup stays red.
	Power off	The power indicator on the right ear cup goes off.
	Low Battery	The signal indicator on the left ear cup flashes green and you hear a beep every 1 minute until the headphones turn off automatically.
	Connected	Solid white(2.4 mode) Solid blue(Bluetooth mode)
Charging dock/ Transmitter	Charging	The charging indicator on the charging dock keeps flashing green.
	Fully Charged	The charging indicator on the charging dock stays green.




How to Turn on/off the Headphones

Power on/off: Press and hold the power button for 2 seconds.
Every time the headphones is turned on, it is in TV Headphones mode.

 How to Charge the Headphones

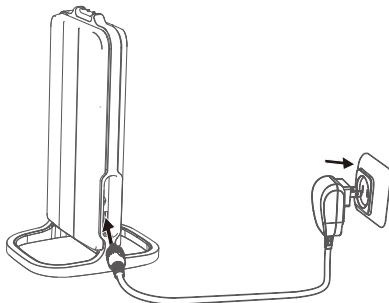

   - ① Connect the charging dock to a power source.
- ② Place the headphones on the charging dock. Make sure the charging contacts under the headband match well with the charging pins on the charging dock.
- ③ The charging indicator on the charging dock keeps flashing green once charging starts, and it stops flashing and stays green when the headphones are fully charged.

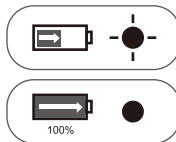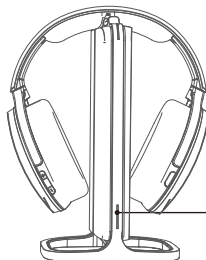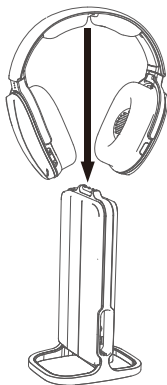


Notes:


- a) Fully charge the headphones before the first-time using.
- b) A complete charging cycle takes about 3 hours, and the headphones can play 10 hours on a full charge.
- c) If the battery is almost drained, you will hear beeps every minute in the headphones. The headphones will automatically shut down after 5 minutes.
- d) If the headphone power is not turned off before charging, signal will be disconnected during charging.

How to Connect the Transmitter to TV

 
Connect the Transmitter to a TV with Optical Output Port

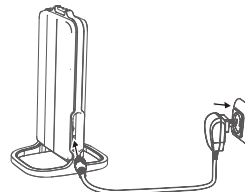

 - ① Connect the power adapter of the transmitter one end to the socket, and the other end to the Type-C interface.

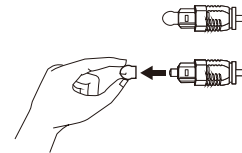

 
- ② Remove the plastic caps of optical cable.

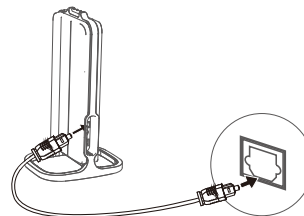


- ③ Connect one end of the optical cable to the OPTICAL IN port of the transmitter and the other end to TV's optical OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [PCM].



 - ④ Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator).

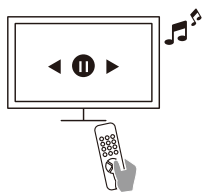


⑤ Play sound

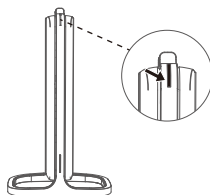 

⑥ The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

 Connect the Transmitter to a TV with a 3.5mm Audio-out Port

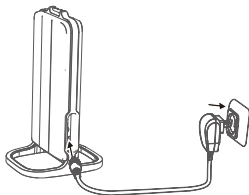


① Connect the power adapter of the transmitter one end to the socket, and the other end to the Type-C interface.




② Connect one end of the 3.5mm audio cable to the audio input port of the transmitter and the other end to TV's audio OUTPUT(not input) port. If there is no sound, make sure your TV speakers are set to [headphones].



 ③ Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator).

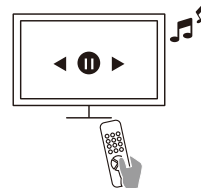


④ Play sound

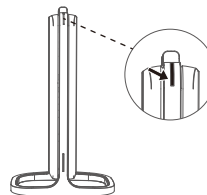 


⑤ The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

 
Connect the Transmitter to a TV with Optical Output Port

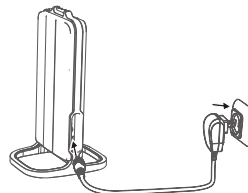

 
① Connect the power adapter of the transmitter one end to the socket, and the other end to the Type-C interface.

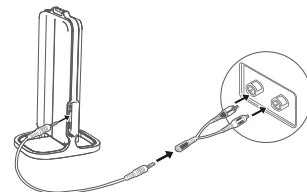

 ② Plug the provided RCA adapter cable into the RCA OUTPUT(not input) on your TV and the 3.5 audio cable into the audio jack of the adapter cable. If there is no sound, make sure your TV speaker is set to [External Speaker].

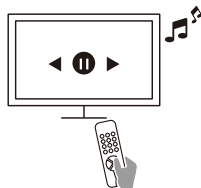

 - ③ Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator).
- ④ Play sound


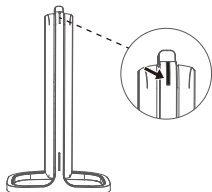


- ⑤ The signal indicator on the transmitter turns white. Indicator keeps in solid white if audio signal and connection are both well, you will hear sound from headphone. Indicator keeps flashing white if audio signal is too weak or connection incorrect.

How to pair headphone to audio device with Bluetooth



  - ① Turn on the headphones. Default mode of headphone is 2.4G/TV headphones(white indicator). Then short press the Bluetooth/2.4G switch button((Voice prompt: Bluetooth headphone). The SIGNAL indicator light of the headphones will turn from white into blue. Indicating headphone now is in Bluetooth mode. If the headphones have been paired with a Bluetooth device before, they will re-connect automatically ((Voice prompt: Bluetooth connected).

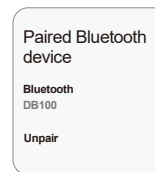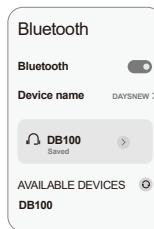

- ② For pairing new audio device, turn on Bluetooth of your device and find [DB100] in AVAILABLE DEVICES and connect it. The SIGNAL light on headphone will be solid blue and you will hear 'Bluetooth connected' when pairing is successful.

- ③ To pair new audio device with Bluetooth, you could disconnect the paired device on Bluetooth setting or clear Bluetooth pairing record on headphone. Press and hold the power button for 8S when headphone turned off. Then you can pair new audio device with headphone.

Introduction to Operation

●Play Music (Bluetooth mode)

Play/Pause: Short press the power button

Next song: Press the volume + button 1S

Previous song: Press volume- button 1S

Volume +(2.4G mode/Bluetooth mode): Short press the volume + button to increase the volume step by step (When the volume level reaches the maximum, the headphones will announce "Maximum volume")

Volume -(2.4G mode/Bluetooth mode): Short press the volume - button to reduce the volume step by step (When the volume level reaches the maximum, the headphones will announce "Maximum volume")

●Voice Assistant (Bluetooth mode)

Double-click the power button to turn on SIRI or voice assistant of the phone (provided that the headphones has been connected to the phone via Bluetooth), and double-click the power button again to turn off SIRI or voice assistant.

●Call function in Bluetooth mode

2.4G mode and Bluetooth mode are both connected: If the mobile phone receives a call when you are listening to TV with headphones, the headphones will automatically exit 2.4G mode(TV audio pause), switch to Bluetooth mode, and automatically enter 2.4G TV mode after the call is hung up.

you are listening to TV with headphones, the headphones will automatically exit 2.4G mode(TV audio pause), switch to Bluetooth mode, and automatically enter 2.4G TV mode after the call is hung up.

When the headphones receive an incoming call in Bluetooth mode, the headphones will play the incoming call music of the mobile phone, and the SIGNAL indicator will also be steady blue light. If you want to answer/hang up the call, short press the power button of the headphones. If you want to reject the incoming call, you need to press and hold the power button of the headphones for 2S. If you have already used the mobile phone to perform a dial-up call operation, and want to cancel the call at this time, you need to short press the power button of the headphones to cancel the dial-up operation.

AUTO Power OFF (Headphone)

In 2.4G mode, turning off the power of the transmitter in the connected state, and the SIGNAL indicator of the headphones enter the reconnection state, the white light flashes slowly at this time (0.5s on/0.5s off), and they will automatically shut down after 5min without operation(Voice prompt: Power off).

In Bluetooth mode, turning off the Bluetooth function of the mobile phone, and then disconnect the Bluetooth connection with the headphones. At this time, the headphones SIGNAL will flash blue light slowly (0.5s on/0.5s off) to enter the alternate state of reconnection and pairing, and they will automatically shut down after 5 minutes of no operation(Voice prompt: Power off).

Standby Mode (Transmitter)

If the signal volume of the audio input is too low, the SIGNAL indicator light will be on for 1MIN, then the white light will flash slowly (0.5s on/0.5s off). If there is no audio input for more than 4MIN, the white light turns off and enters standby mode. When there is audio input again, the SIGNAL indicator will reactivate and enter the state of solid white light.

Re-connect/re-sync

If headphone and transmitter have lost connection in TV mode, operate as below will rebuild their connection permanently:

- ①Turn off the power of transmitter.
- ②Turn on the power of headphone.
- ③Press and hold 2.4G/Bluetooth switch button for 5S until SIGNAL white light flashes quickly, headphone will be in pairing mode within 5 MIN.
- ④Turn on the power of transmitter.
- ⑤They will connect automatically and SIGNAL light keeps in solid white.

LED Indicators Guide

Charging dock/ Transmitter	SIGNAL (white)	Flashes quickly for 5S	Power on/Connecting
	SIGNAL (white)	Solid white	Connected with audio signal
	SIGNAL (white)	Flashes slowly for 4MIN→ white light turns off	No audio signal or audio signal too weak→standby mode
	CHARGE (green)	Flashes slowly	Charging
	CHARGE (green)	Solid green	Fully charged
Headphone	Power (red)	Solid red	Power on
	Power (red)	Red light turns off	Power off
	Power (red)	Flashes slowly	Low battery
	Power (red)	Flashes five times	Unpair with audio device
	SIGNAL (blue/white)	Solid white	Connected in TV mode
	SIGNAL (blue/white)	Flashes slowly in white	Disconnected in TV mode (transmitter off/ distance exceeded)
	SIGNAL (blue/white)	Flashes quickly in white	Pairing in TV mode
	SIGNAL (blue/white)	Flashes slowly in blue	Switch to Bluetooth mode/pairing/ distance exceeded
	SIGNAL (blue/white)	Solid blue	Bluetooth connected

Q&A

Q: No sound comes from headphones, what should I do?

A: Check whether the signal light on the transmitter stays red, if not, please try the following:

1. Make sure the charging dock is connected to a power source.
2. Make sure the headphones have been turned on.
3. Do not plug into any ports labeled as "AV IN".
4. If your TV has a 3.5mm audio output, please make sure the 3.5mm audio cable is plugged into the audio-out port behind the TV. Do not plug it into any audio-in port.
5. If your TV has RCA outputs, please make sure the RCA adapter cable is plugged into RCA output ports behind the TV. Do not plug it into any RCA input ports.
6. Please make sure that your audio device is turned on and in play mode.
7. If connecting the transmitter to a TV with a 3.5mm audio-out port, please do not mute your TV.
8. Instead of TV, connect to your phone to test.
9. If the steps above did not resolve your issue, contact us (amazon@artiste-audio.com) for help.

Q: The volume is not loud enough, what should I do?

A: Turn up your TV's volume to the maximum level.

Q: Headphones cannot get charged, what should I do?

A: Check whether the charging light on the charging dock keeps flashing green, if not, please try the followings:

1. Make sure the charging dock is connected to a power source.
2. Make sure the charging contacts under the headband match well with the charging pins on the charging dock. The charging indicator keeps flashing green once charging starts and it stops flashing and stays green when the headphones are fully charged.

Q: Sound only comes from headphones. What should I do if I need sound coming from headphones and TV simultaneously?

A: Please refer to the steps for connecting the transmitter to a TV with RCA outputs.

The mains plug inlet is used as the disconnect device, The socket-outlet shall be installed near the equipment and shall be easily accessible.

CAUTION

Risk of explosion if battery is replaced by an incorrect type.

Warning

To avoid replacement of a battery with an incorrect type

Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery.

Don't leaving a battery in an extremely high temperature surrounding environment

To avoid battery subjected to extremely low air pressure.



To prevent possible hearing damage, do not listen at high volume levels for long periods.



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.



The symbol indicates class II equipment



The symbol indicates AC voltage



The symbol indicates DC voltage



For indoor use only



The symbol indicates energy efficiency marking

Specifications

Transmission Mode :2.4G + Bluetooth

Bluetooth Version: V5.3

Working Range: 30M(2.4G)/50M(Bluetooth)

Frequency Response: 15Hz-20KHz

Driver Unit: Φ40mm

S/N Ratio: 75dB

Distortion: 0.5%

Battery Capacity: 1.2V 700mAh

Working Time: 10 Hours

Charge Time: 3 Hours

Standby power consumption: < 0.5 W (standard standby mode)

When stop playing, the unit will automatically turn off in around 10 minutes.

Warranty

TV headphones are backed by a one-year warranty.

If you have any questions or suggestions about the product or packaging, please contact us(amazon@artiste-audio.com) or online platform.

Important Safety Instructions

- Use of headphones will impair your ability to hear other sounds. Use caution while using your headphones when you are engaging in any activity that requires your full attention.
- If you have a pacemaker or other electrical medical devices, you should consult your physician before using this product.
- This package contains small parts that may be hazardous to children and should be kept out of reach from children. This product is not a toy – never allow children to play with this product. Always store the product out of reach from children. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never try to dismantle the product yourself, or push objects of any kind into the products, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.
- Avoid exposing your product to heat and humidity to protect against damage to the product or injury to you.
- Keep all products, cords, and cables away from operating machinery.
- If the product overheats, if the product has been dropped or damaged, if the product has a damaged cord or plug, or if the product has been dropped in a liquid, discontinue use and contact us.
- Do NOT use in areas where there are explosive hazards.

CLASSIC TECH DEVELOPMENT LIMITED

Address: 12/F, Yue Xiu Industrial Building, 87 Hung To Road, Kwun Tong, Kowloon, Hong Kong.

Phone: +852 2790 8778

Website: www.artiste-audio.com

Technical Support: amazon@artiste-audio.com

2.4G/Bluetooth Dual-mode Wireless TV Headphone DB100

Made in China